


VideoRay Scout

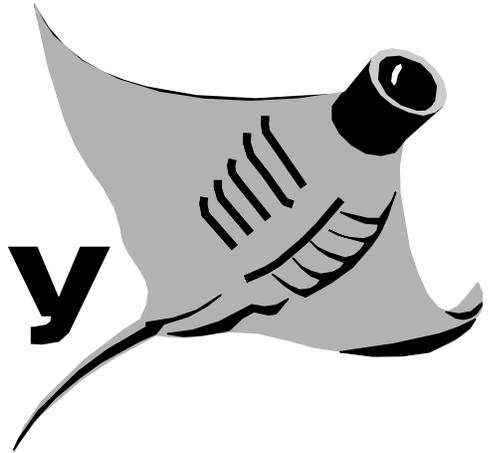

UNDERWATER VIDEO VEHICLE



1	INTRODUCTION.....	4
1.1	ABOUT THIS MANUAL	4
1.2	ABOUT YOUR VIDEORAY	4
1.3	FRIENDLY ADVICE	4
2	GENERAL INFORMATION	5
2.1	DESCRIPTION.....	5
2.2	OPERATING ENVIRONMENT	5
2.3	SCOUT SPECIFICATIONS	6
3	SAFETY FIRST!.....	7
3.1	USE COMMON SENSE	7
3.2	ELECTRICAL AND VIDEORAY SAFETY.....	7
3.3	PERSONAL SAFETY	7
4	GETTING FAMILIAR WITH YOUR VIDEORAY	8
4.1	UNPACKING YOUR VIDEORAY	8
4.2	INSPECTING YOUR VIDEORAY	8
4.3	PREPARING TO OPERATE YOUR VIDEORAY	8
5	YOUR FIRST DIVE	9
5.1	DIVE CONDITIONS	9
5.2	SETTING UP YOUR VIDEORAY	9
5.3	PRE-DIVE INSPECTION.....	9
5.4	LAUNCHING THE VIDEORAY	10
5.5	MANEUVERING THE VIDEORAY	11
5.6	RETRIEVING THE VIDEORAY	11
5.7	POST-DIVE INSPECTION	12
6	VIDEORAY CONTROLLER FEATURES AND FUNCTIONS.....	13
6.1	CONNECTORS	13
6.1.1	<i>TETHER CONNECTION.....</i>	<i>13</i>
6.1.2	<i>VIDEO</i>	<i>13</i>
6.1.3	<i>100/240 VAC 50-60 Hz.....</i>	<i>13</i>
6.2	SWITCHES.....	13
6.2.1	<i>MAIN POWER (On Off)</i>	<i>13</i>
6.2.2	<i>DEPTH CONTROL (Up Down)</i>	<i>13</i>
6.3	JOYSTICK.....	13
6.3.1	<i>JOYSTICK Navigation (Forward Left Right Reverse).....</i>	<i>13</i>
6.3.2	<i>JOYSTICK Lights Control (Dim Bright).....</i>	<i>14</i>
6.4	MONITOR CONTROL.....	14
6.4.1	<i>POWER.....</i>	<i>14</i>
6.4.2	<i>SYSTEM.....</i>	<i>14</i>
6.4.3	<i>ADDITIONAL NON-LABELED BUTTONS ON THE DISPLAY MONITOR</i>	<i>14</i>
7	“BEST” PRACTICES AND DIVING TIPS	15
7.1	NAVIGATION.....	15
7.2	HANDLING THE TETHER	15
7.3	AVOIDING TANGLES	17
7.4	FREEING A SNAGGED TETHER	17
7.5	BALLAST SETUP.....	17
7.6	LOSS OF THRUSTER POWER	18
7.7	FOGGED VIEW PORT AND / OR LIGHT LENSES	18



8	VIDEORAY MAINTENANCE	19
8.1	CLEANING VIDEORAY	19
8.2	INTERNAL MOISTURE DETECTION	19
8.2.1	<i>MOISTURE INDICATOR</i>	19
8.3	MECHANICAL SERVICING	19
8.3.1	<i>PRECAUTIONS</i>	19
8.3.2	<i>REQUIRED TOOLS</i>	19
8.4	CARING FOR SEALS AND O-RINGS	20
8.4.1	<i>O-RING RULE OF THUMB</i>	20
8.4.2	<i>INSPECTION</i>	20
8.4.3	<i>CARE AND STORAGE</i>	20
8.4.4	<i>HANDLING SEALED COMPONENTS</i>	20
8.5	SERVICING THE LIGHTS	21
8.5.1	<i>REPLACING A LIGHT BULB</i>	21
8.6	THRUSTER GUARD AND PROPELLER REMOVAL	21
8.6.1	<i>VERTICAL THRUSTER GUARD</i>	21
8.6.2	<i>PROPELLER REMOVAL AND REPLACEMENT</i>	21
8.7	CARTRIDGE SEAL INSPECTION AND REPLACEMENT	21
9	FIELD SERVICING.....	23
9.1	TROUBLE SHOOTING	23
9.1.1	<i>LIGHTS DO NOT WORK</i>	23
9.1.2	<i>LOSS OF THRUST OR MANEUVERABILITY</i>	23
9.1.3	<i>VIDEO MONITOR DOES NOT SHOW PICTURE</i>	23
9.1.4	<i>POOR PICTURE QUALITY</i>	23
9.2	ORDERING PARTS	24
9.3	REPAIRS	24



1 INTRODUCTION

1.1 ABOUT THIS MANUAL

The purpose of this manual is to provide information only. It is subject to change without notice and does not represent a commitment on the part of the VideoRay, or its agents.

1.2 ABOUT YOUR VIDEORAY

Prior to shipment, the VideoRay Scout was tested and found to comply with factory standards.

The serial number of the VideoRay is labeled on the hull under the float block, and inside the hull (visible through the rear dome). The serial number of the controller is engraved on a plate that is attached to the front of the Controller case. Please provide your system serial number(s) whenever corresponding with us.

1.3 FRIENDLY ADVICE

“Flying” the VideoRay can be somewhat addictive. If you are operating VideoRay and have an important appointment later in the day, we strongly recommend you set an alarm clock or arrange to have a friend remind you at the appointed time!

2 GENERAL INFORMATION

2.1 DESCRIPTION

VideoRay Scout is a submersible, Remotely Operated Vehicle (ROV) designed to take advantage of its portability and size. Set up and vehicle control are simple and intuitive, enabling VideoRay to be easily carried, deployed, and operated by one person. VideoRay can go anywhere, powered from AC, or battery pack and inverter. Operation of the VideoRay is quickly mastered after only a few practice “flights.” Connection to a video monitor provides the operator with a view of everything the VideoRay sees.

VideoRay’s pressure housings are machined from marine grade aluminum and protected by an anodized finish. The vehicle is equipped with a forward camera, two lights, and three thrusters.

VideoRay carries no batteries; it is completely powered and controlled from the surface through a small diameter tether.

The VideoRay power supply plugs into any standard grounded 120/240 Volts AC 50/60 Hz power source. For operational safety, the joystick control, vehicle and tether carry a maximum voltage of 48 Volts DC.

2.2 OPERATING ENVIRONMENT

VideoRay ROV

Medium: Fresh or Salt Water

Operating Temperature: 32-122° F (0-50°C)

VideoRay Power Supply / Controller

Caution: While VideoRay is designed to be operated in water, the Power Supply / Controller is splash-resistant and should not be subject to excessive water spray or rain when opened. The Power Supply / Controller case is watertight only when closed.

2.3 SCOUT SPECIFICATIONS

Depth Rating	76 m (250 feet)
Dimensions	35 cm (13 ¾ inches) long 22.2 cm (8-¾ inches) wide 21.6 cm (8-½ inches) high
Weight	3.6 kg (8 lb.)
Housing Material	Anodized Aluminum (marine grade)
Input Voltage	100/240 Volts AC 50/60 Hz Power Source
Tether Voltage	48 Volts DC maximum
Lights	Two 20 Watts (1 port, 1 starboard)
Tether	40 m (131 feet) Neutrally Buoyant Minimum bend diameter = approximately 8 cm (3 inches)
Controller	Integrated with power supply in Pelican Diver Case
Video Display Monitor	LCD

3 SAFETY FIRST!

The following are some safety tips that may prevent injury to you as the operator and those around you, or damage to the VideoRay submersible.

3.1 USE COMMON SENSE

These first instructions appeal to common sense:

- 1) Read the safety and operating instructions before operating the VideoRay.
- 2) Retain this manual and other safety and operating instructions for future reference.
- 3) Heed all warnings printed on the system components and in the manual.
- 4) Follow the operating and maintenance instructions.
- 5) Be aware of and alert to potential hazards in and around water, including weather conditions, and follow standard water safety practices.

3.2 ELECTRICAL AND VIDEORAY SAFETY

- 1) Protect the Power Supply / Controller from splashes and immersion in water when open. The controller is sealed when closed, and splash resistant when open.
- 2) Always plug the system into a grounded receptacle.
- 3) There are No User Serviceable Parts Inside the power supply. Only qualified technicians or VideoRay personnel should perform electrical servicing.
- 4) Do not subject the VideoRay to impact. The camera, lights, and electronic components may be damaged by an impact.
- 5) Never operate the lights for more than 60 seconds out of water. Never operate the thrusters for more than 20 seconds out of water. Your VideoRay is designed for submerged operation and requires water to cool the lights and thrusters.
- 6) Do not stress or kink the tether or bend it tighter than the minimum bend diameter, which is about 3 inches. Do not allow the tether to be deployed over sharp edges or rough surfaces.

3.3 PERSONAL SAFETY

Be aware of the safety of those around you!

- 1) Beware of swimmers or boaters. The VideoRay and tether can pose a hazard to swimmers, divers, and small craft, as well as persons in and around the operating area. Obtain the acknowledgment of those around you prior to launch. Make sure everyone within VideoRay's range of operation is aware the vehicle is being deployed.
- 2) Keep your operating area neat and free of accident causing clutter.
- 3) Keep fingers and objects clear of the thruster propellers.

4 GETTING FAMILIAR WITH YOUR VIDEORAY

4.1 UNPACKING YOUR VIDEORAY

Your VideoRay Remotely Operated Underwater Video Vehicle is packaged and shipped in a rugged Pelican Diver Case. This case has O-rings and is sealed against water when closed. The case contains the VideoRay controller, ROV and 40 meters (131 feet) of tether. The controller integrates the power supply, operating controls and video display monitor.

Upon receiving your VideoRay, check the containers and contents for any damage that may have occurred during transport.

4.2 INSPECTING YOUR VIDEORAY

You should find these components in the shipping case:

- 1) Fully assembled VideoRay ROV with 40 meters (131 feet) of tether
- 2) Integrated Power Supply / Controller
- 3) Maintenance Tools and Spare Parts Kit
- 4) Video Display Monitor (mounted in the cover of the controller case)
- 5) This Owner's Manual

Should any of these components be missing or damaged, please notify the selling agency.

4.3 PREPARING TO OPERATE YOUR VIDEORAY

Operating your VideoRay controller is like being in the driver's seat of your car. The joystick and switches are used to control your VideoRay ROV, similar to the way you use the steering wheel, pedals and dashboard knobs to control your car's operation.

Before setting up and operating your VideoRay, we ask that you read all safety precautions in Section 3. The fundamentals of operation can be found in Section 5. Detailed descriptions of all of the features and functions can be found in Section 6. Section 7 provides advanced handling instructions and tips. Sections 8 and 9 cover maintenance and troubleshooting.

Take a moment now to familiarize yourself with the VideoRay ROV, the controller's layout and the feel of the controls. Proper operation, maintenance and safe handling of your VideoRay will provide you with many hours of enjoyment of the underwater views.

5 YOUR FIRST DIVE

Your VideoRay ROV has been designed with ease of use in mind. This section covers only the most basic aspects of operating your VideoRay. It will walk you through the steps required to make your first dive. Section 6 contains a complete reference to all of the features and functions of your VideoRay.

Note: If the Safety Instructions in Section 3 have not been read, it is recommended you do so before operating your VideoRay.

5.1 DIVE CONDITIONS

Your first dive should be made in conditions that are suitable for learning. The following conditions are optimal:

- Slow water current
- Low wind speed
- Clear water
- No obstructions above or below the surface

While VideoRay can be used in less than optimal conditions, including some rather extreme conditions, it is best to gain some experience before attempting such challenges. If the conditions are too adverse, it may be wise to postpone your dive or find a more suitable dive location.

Until you feel comfortable operating your VideoRay, you should try to operate it within a close range.

5.2 SETTING UP YOUR VIDEORAY

The following procedures outline the steps required to prepare the VideoRay for operation.

- 1) Open the Power Supply / Controller box and make sure the Main Power switch is set to the “Off” position.
- 2) Unpack the VideoRay and tether. Be careful not to kink the tether. See Section 7.2 for proper tether handling techniques and cautions.
- 3) Connect the female end of the tether to the VideoRay ROV. Connect the male end of the tether directly to the controller.
- 4) Plug the power cord into an appropriate Alternating Current (AC) power source.
- 5) You may need to adjust the ballast depending upon dive conditions and the activities you intend to perform. See Section 7.5 for more information on adjusting the ballast.

Once the system is connected together, a Pre-Dive Inspection should be made.

5.3 PRE-DIVE INSPECTION

A pre-dive check should to be carried out prior to every dive.

- 1) Visually inspect the vehicle to ensure that the propellers are free of tangles and that the vehicle is in operational condition. Check the propeller guards for damage and / or misalignment.
- 2) Check the tether for scrapes, nicks or other visible damage.
- 3) Ensure that all fasteners are in place and secure.
- 4) Ensure that the VideoRay has been properly ballasted for the water conditions in which you plan to dive, and that the ballast is secure. The VideoRay comes from the factory ballasted for fresh water, but the ballast may need to be adjusted depending on the water (fresh or salt). See Section 7.5 for information on Ballast Setup.
- 5) Ensure that all cables are properly connected and the tether connectors are screwed together to avoid separation and loss of the VideoRay ROV.
- 6) Power up the system by engaging the Main Power switch to the “On” position. The monitor should automatically power up, but if it does not, there is a power button on the monitor that may need to be pressed.
- 7) Using the joystick, displace it in all directions to test the port and starboard thrusters.
CAUTION! Do not operate the thrusters for more than 20 seconds when the VideoRay ROV is out of the water. Prolonged operation in a dry environment will result in damage to motor shaft seals.
- 8) Using the Depth Control knob, rotate it to test the vertical thruster. Return the knob to the neutral position.
- 9) Verify that both lights are working by rotating the joystick toward “Bright”, and then returning the knob to the “Dim” position.
CAUTION! Do not operate the lights for more than 60 seconds when the VideoRay ROV is out of the water. Doing so may cause overheating and damage the unit.
- 10) Check the camera and monitor operation. If you are using a VCR, check that the recording and playback functions are operational.
- 11) Power down the system until you are ready to launch the VideoRay.

5.4 LAUNCHING THE VIDEORAY

CAUTION! Be certain that the tether connectors are securely connected and screwed together to avoid separation and loss of the VideoRay ROV.

- 1) Power up the VideoRay.
- 2) The tether should be neatly coiled and made ready to deploy. It must be free of tangles, knots, and other obstructions.
- 3) Inform swimmers, divers, boaters and others in the area that you are about to deploy the VideoRay and that a tether that will be in the water as well.



- 4) Avoid dropping or throwing the VideoRay into the water. Rather, use the tether to lower the VideoRay to the water surface. This method will prevent potential of impact of the VideoRay against the pier or vessel from which you are launching.

5.5 MANEUVERING THE VIDEORAY

VideoRay is relatively easy to fly... and fun! Initially, a new operator should spend a few minutes controlling the VideoRay within sight near the surface in order to become familiar with VideoRay's reaction to its controls.

Flying the VideoRay in open water is not difficult and is quickly mastered. Operating the VideoRay in and around obstacles such as boats, pilings, and anchor lines will require a little more practice. In these conditions, it is advisable to go slow and consider the possible effects of any maneuvers.

Basic VideoRay operating instructions:

- 1) The operation of VideoRay is intuitive and simple. The joystick controls variable speed forward and reverse thrust. Push the joystick forward to move VideoRay forward. Pull the joystick back to back up.
- 2) Steering VideoRay is accomplished by moving the joystick left or right. Additionally, the joystick rotates (third axis control) to control the light intensity.
- 3) The Depth Control knob on the left-hand side of the controller controls the vertical thruster. Rotating the knob from the center detent position controls the depth of the dive. Rotating the knob toward "Down" increases the depth. Rotating the knob toward "Up" causes the VideoRay to move toward the surface. VideoRay should be ballasted to always float upwards slowly, so a slight continuous downward thrust is necessary to dive or to maintain a constant depth. Note: Inadequate ballast will cause VideoRay to float high in the water. When this happens the vertical thruster may not be sufficiently submerged to provide adequate downward thrust, and a rather impressive "water fountain" effect will result. Add more weight to the ballast if this is a problem. See Section 7.5 for tips on proper adjusting the ballast.
- 4) The intensity of the lights may be adjusted by rotating the joystick.

Relax and enjoy your dive. Whatever you do, DON'T PANIC.... In the event of a problem, or if the tether appears to have become snagged on an obstacle, the best course of action is to stop and calmly assess the situation. A way out may present itself. Should you experience any problems, see Sections 7 and 9 for tips and troubleshooting.

5.6 RETRIEVING THE VIDEORAY

- 1) Ensure the tether is free from obstacles on which it may become caught or entangled in the water.
- 2) Navigate the VideoRay to a retrieval area where the water surface is clear of obstructions.
- 3) Power down the VideoRay by switching off the main power supply.

- 4) Retrieve the VideoRay by pulling it out of the water by its tether. Care should be taken to coil the tether properly (see Section 7.2) and avoid collisions between VideoRay and the pier or boat hull.
- 5) Once the VideoRay is retrieved, perform a Post-Dive Inspection as described below.

5.7 POST-DIVE INSPECTION

A Post-Dive inspection should be carried out after every dive.

- 1) Make sure the power is off.
- 2) Unplug the connections.
- 3) **Return the video display monitor to its storage position by loosening the locking knob and rotating the monitor so the screen faces toward the inside of the cover and away from you.**
- 4) The vehicle should be visually inspected following each dive to ensure that no mechanical damage has occurred.
- 5) Visually check through the ports to ensure that no water has entered the pressure housings.
- 6) Check that the propeller shafts have not been fouled with material such as fishing line, string, seaweed, or other debris.
- 7) **If VideoRay has been used in salt water, thoroughly rinse the vehicle with fresh water prior to being stored away.**
- 8) Inspect the tether for cuts, nicks and / or kinks in the outer shell. Store the tether properly for the next use.
- 9) Store all components securely.

6 VIDEORAY CONTROLLER FEATURES AND FUNCTIONS

6.1 CONNECTORS

6.1.1 TETHER CONNECTION

This connector is used to couple the Controller to the VideoRay ROV using the supplied tether.

6.1.2 VIDEO

This composite video out connector should be used with the supplied video cable and monitor. This composite video output can also be used to connect to an external monitor (not supplied) or a recording device (not supplied), such as a VCR, to display or record images captured by the VideoRay onboard camera. When using external video display and recording devices, you will need additional cables (not supplied) to connect the composite video out to these devices.

6.1.3 100/240 VAC 50-60 Hz

This is the source feed for the Controller's power. For maximum portability, the VideoRay can be run from several common power sources. The AC power cord plugs into any 100 to 240 VAC outlet. An external battery and an inverter, or a portable generator may also be used to power the VideoRay.

6.2 SWITCHES

6.2.1 MAIN POWER (On | Off)

This switch activates the controller. It should remain in the "Off" position when not using your VideoRay or when the system is unattended.

6.2.2 DEPTH CONTROL (Up | Down)

A Depth Control knob on the left-hand side of the controller controls the vertical thruster. Rotating the knob from the center detent position controls the depth of dive. Rotating the knob toward "Down" increases the depth. Rotating the knob toward "Up" causes the VideoRay to move toward the surface. VideoRay should be ballasted to always float upwards, so continuous downward thrust is necessary to dive or to maintain a constant depth.

6.3 JOYSTICK

6.3.1 JOYSTICK Navigation (Forward | Left | Right | Reverse)

The joystick controls variable speed forward and reverse thrust. Push the joystick forward to move VideoRay forward. Pull the joystick back to back up. Steering VideoRay is accomplished by moving the joystick left or right. Additionally, the joystick rotates (third axis control) to enhance control capabilities.

6.3.2 JOYSTICK Lights Control (Dim | Bright)

The VideoRay joystick incorporates an additional operating technique to control the intensity of the lights. The joystick has a "third axis" of operation. In addition to moving both forward and back (first axis) and side to side (second axis,) the knob will rotate either clockwise or counterclockwise (third axis).

Rotating the joystick counterclockwise decreases the brightness of the lights, rotating clockwise increases the brightness. The system uses proportional control. The rate at which the intensity changes is proportional to the amount the joystick is rotated. The further you rotate the joystick, the quicker the intensity changes. When centered, the brightness level is held constant. This technique allows you to set the desired light intensity without having to continue to hold the joystick rotation.

6.4 MONITOR CONTROL

6.4.1 POWER

The monitor powers up automatically when the controller is turned on. The monitor Power button can be used to turn off the video display while the controller is on. Pressing the Power button again will turn the monitor on.

6.4.2 SYSTEM

The System button on the monitor is used to determine the video format (NTSC or PAL). Normally, the format will be set at the factory and should not need to be changed. If the monitor is not displaying the video image properly, this button might have been accidentally bumped. In this case, you can restore the correct display format by pressing the System button.

6.4.3 ADDITIONAL NON-LABELED BUTTONS ON THE DISPLAY MONITOR

The four additional buttons on the monitor that are not labeled have no function and may be ignored.

“BEST” PRACTICES AND DIVING TIPS

7.1 NAVIGATION

Navigation of a submersible is very different from navigation on land. The largest difference is that VideoRay operates in three dimensions, rather than the familiar two. Below are some tips for navigating with VideoRay in its native environment.

- 1) The submerged operation and navigation of VideoRay is accomplished by what is commonly referred to as "dead reckoning". This involves the observation and subsequent recognition of landmarks as viewed on your Video Monitor. The compass rose will help you keep track of direction.
- 2) When operating in areas containing obstructions or obstacles that could snag or foul the tether, the operator should endeavor to remember the route taken to get to any one position. Not only will this information be helpful on the return trip, it will be extremely valuable in the event the tether does become snagged or fouled!
- 3) In the event obstructions are encountered, or you become lost or disoriented with respect to the VideoRay's position, always remember that the safest way back is to follow the tether.

7.2 HANDLING THE TETHER


The tether should be considered the most important part of the VideoRay system. It feeds power and control signals to the vehicle and returns data from the sensors. If the tether becomes damaged from improper use, poor handling or an accident, the vehicle may become crippled or inoperable. For maximum tether life and reliability, follow these recommended tether handling tips:

- 1) Never step on the tether. Trampling the tether underfoot may crush conductors and coax cables, leading to premature failure. Trampling is also abrasive to the tether jacket. Remember, this is a multi-conductor tether, not an electrical extension cord.
- 2) Never allow a truck, passenger vehicle, or boat to drive over the tether. This will do more concentrated and immediate damage than trampling.
- 3) Do not allow the tether to be deployed over a sharp edge. This could cause a kink, cut or excessive wear.
- 4) Do not bend the tether beyond its minimum bend diameter. Most tethers have a minimum bend diameter of three to four inches. If the tether is bent beyond this diameter on pulleys or around corners, wire fatigue will be accelerated. For a general rule of thumb, do not bend the tether any tighter than what would fit around a typical soda pop can.
- 5) Never kink the tether. A fully bent back kink causes local but permanent deformation in the tether. This can be serious because accelerated wire fatigue is subsequently concentrated at the kink location. Such a kink may also be severe enough to instantly break any coax cables in the tether.

- 6) Avoid snap loading the tether. This situation may easily occur when a slack tether is reeled onto a motorized spool. Loads may peak at a very high value when the tether snaps taut. Another dangerous situation for snap loading is a tethered submersible vehicle operated from a pitching ship.

There are a few proper and many improper ways to wind and unwind a tether. If improper tether handling techniques are used the tether may become tangled, which ultimately leads to kinking, trampling underfoot, and other tether damage. The following suggestions are provided for keeping the tether tidy and ready for deployment at any time.

- 1) The preferred tether storage and deployment method is to use a VideoRay Tether Deployment System (Optional system available from VideoRay). For very long tethers, this often becomes the preferred choice.
- 2) Shorter tethers may be stored and deployed from a box with a removable lid. If the tether is to be deployed from a hanger system, make sure the hanger supports the tether beyond its minimum bend diameter.
- 3) When coiling the tether in a box, put in the surface connector first so that the vehicle connector is at the top of the coil. Start the coil at least 10 feet away from the surface end of tether. This leaves some free tether from the bottom of the coil to quickly connect to the power supply without unwinding or removing the coil.
- 4) When deploying the tether, a person should be available to tend the unwinding coils to prevent kinks.
- 5) When coiling the tether, do not force the tether to twist. Doing so may damage the tether or make it very difficult to manage. When a loop of tether is laid down in a coil, the tether experiences an axial twist. This causes the next loop to preferentially lay in the opposite direction. Thus, any given tether loop will have a self-preferred winding direction – left or right. Both winding directions may be easily accommodated as shown below by allowing the loops to turn under themselves. This creates loops in both coiling directions and any twist in the tether is canceled in the subsequent loop.

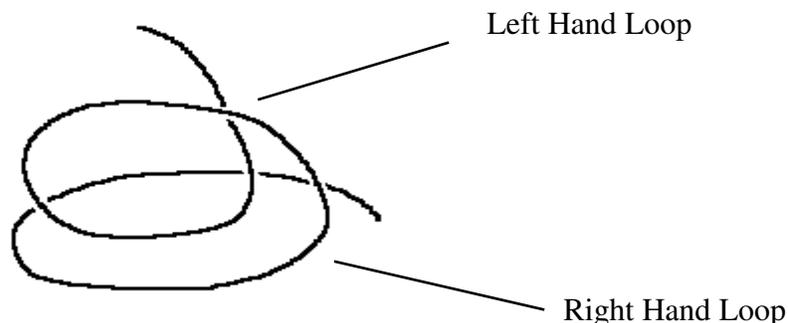

Proper Tether Winding Technique

7.3 AVOIDING TANGLES

As mentioned above, it is always a good idea to consider where the tether lies as VideoRay moves through the water or along the bottom. The following tips may assist in dealing with the tether and avoiding tether problems:

- 1) Don't feed out unnecessary tether. When flying VideoRay back along its tether, haul in the slack line to avoid leaving a loop behind the vehicle.
- 2) Avoid weaving in and around fixed objects like pilings, rocks, and anchors. When operating in possibly fouled areas, it is advisable to remain on the surface until VideoRay is approximately above your intended dive objective.

7.4 FREEING A SNAGGED TETHER

- 1) Do not try to rip a snagged tether free. In the event VideoRay's tether becomes snagged, treat the situation as a challenge rather than a disaster. Fly the VideoRay along the tether to determine the location of the snag. If the problem area can be located visually using the vehicle, appropriate corrective action can usually be taken.
- 2) If the problem area cannot be located using VideoRay's camera, try pulling gently on the tether. Turn the vehicle power off and pull from different angles and directions if possible.
- 3) In the event the tether cannot be otherwise freed, it may be necessary to have a diver retrieve it manually. In that event, turn off the system power and unplug it from its power source.

7.5 BALLAST SETUP

VideoRay is configured at the factory to be neutrally buoyant in fresh water. Depending upon the water conditions, including salinity or other factors, the VideoRay ballast might need to be adjusted for proper operation. Ballast is adjusted by adding or removing weights from the ballast retaining system located under the ROV between the skids. These weights are included with your VideoRay.

The ballast should be adjusted so a submerged VideoRay ROV floats upward slightly (positive buoyancy). Should the VideoRay rise rapidly, or the vertical thruster create a fountain spray of water when near the surface, more ballast must be added. Should the VideoRay sink, some ballast must be removed. Salt water density is greater than that of fresh water. Additional ballast must be added to the VideoRay ROV when using it in salt water.

7.6 LOSS OF THRUSTER POWER

- 1) Should VideoRay suddenly become unresponsive in a particular direction, it is possible that one of the thrusters may have lost power. The most common cause of thruster power loss is a fouled propeller. This is often the result of organic or synthetic material becoming tangled in a propeller and subsequently wrapped tightly around the propeller shaft.
- 2) VideoRay's thrusters are designed to operate at their rated speed for extended periods of time. However, should a propeller become jammed, the motor may burn out if power is continually applied. Power should be turned off, and the vehicle retrieved and inspected. Remove any debris and test the thruster for proper operation. Note that the guards on the VideoRay are specifically designed for rapid and easy removal.
- 3) If the VideoRay's thrusters are not fouled and still do not run, try resetting the VideoRay controller by switching the power supply off, waiting ten seconds, and switching it back on again.
- 4) Servicing may be necessary if the propeller and shaft are clear and rotate freely, yet the thruster does not respond to its controls.

7.7 FOGGED VIEW PORT AND / OR LIGHT LENSES

Atmospheric conditions may result in some humidity being present inside VideoRay's pressure housings. This may cause condensation to form on the camera view port and/or light lenses. Ordinarily this problem is not serious and may go away over a short period of time. Should it persist, the use of a desiccant such as silica gel, which can be found at most photographic stores or from VideoRay, may be placed inside the vehicle's pressure housing.

8 VIDEORAY MAINTENANCE

8.1 CLEANING VIDEORAY

- 1) Always unplug the system from the power source before cleaning.
- 2) Do not use liquid or aerosol cleaners on the system control box and power supply. Use a damp cloth for cleaning.
- 3) Disconnect the power before attempting to clear fouled propellers.
- 4) After use in salt water or chemical solutions, thoroughly rinse VideoRay with fresh water before storing.
- 5) For general cleaning of VideoRay, use a mild detergent.

8.2 INTERNAL MOISTURE DETECTION

8.2.1 MOISTURE INDICATOR

A moisture sensitive color-changing desiccant pack is included in the main hull and is visible through the rear dome. In dry conditions, this desiccant pack is blue. If moisture is present, the desiccant pack will turn pink. If the desiccant pack is pink, the system should not be used until the moisture is removed and the cause of the moisture determined and corrected. See Section 8.8 on the main housing.

8.3 MECHANICAL SERVICING

8.3.1 PRECAUTIONS

DISCONNECT THE SYSTEM POWER AND VEHICLE TETHER BEFORE COMMENCING ANY MAINTENANCE AND/OR REPAIRS!

1. If you are unfamiliar with O-Ring seals, read Section 8.4 "Caring for O-Rings" before attempting to open any sealed compartment or replace any O-Rings.
2. Sealed components are designed to be tight fitting. Be gentle when opening them. Forcing a component open or closed may damage it permanently. Do not use metal tools to pry open sealed parts!
3. Many VideoRay components are anodized aluminum and will be damaged by contact with steel. If components do not come apart with bare hands or "soft" tools, check to ensure that all fasteners have been removed.

8.3.2 REQUIRED TOOLS

The tool kit provided with VideoRay includes all tools necessary for VideoRay maintenance. A list of tools is found in Section 10.

8.4 CARING FOR SEALS AND O-RINGS

VideoRay recommends the use of Dow Corning #4 Silicon Grease as a lubricant for O-rings used as seals. Other lubricants can lead to deterioration and failure of the O-rings and components. **DO NOT USE ANY OTHER LUBRICANTS OTHER THAN THE RECOMMENDED LUBRICANT.**

8.4.1 O-RING RULE OF THUMB

WHEN IN DOUBT, THROW IT OUT! Generally, when compared to the equipment they are protecting, O-rings are very inexpensive. Using an incorrectly sized or damaged O-ring can result in flooding and catastrophic failure of the VideoRay. If there is any doubt as to the suitability or condition of an O-ring it should be replaced.

8.4.2 INSPECTION

O-rings wear out over time. Inspect all O-rings whenever a sealed assembly is apart. "Healthy" O-rings are soft, flexible and have not been pinched or nicked. Should an O-ring appear brittle, or have apparent cracks, nicks, or evidence of being pinched or permanently compressed, it will require replacement. Sealing surfaces should also be inspected while an assembly is apart. The surfaces should be examined to determine that they are free of dirt, nicks, scratches, or damage, which may result in seal failure once reassembled.

8.4.3 CARE AND STORAGE

O-rings should be stored in clean plastic bags to protect them from dust when not in use. Avoid prolonged storage in direct sunlight as this may result in deterioration of the O-ring material. Stored O-rings should be sorted with regard to type and size with that information noted on the storage bag. Use of an incorrect O-ring can result in an ineffective seal.

8.4.4 HANDLING SEALED COMPONENTS

O-rings and other components with sealing surfaces should never be handled with dirty or gritty hands. A small amount of dirt trapped next to an O-ring can cause leakage, which could result in serious damage to the equipment the O-rings are intended to protect. Should an O-ring or sealing surface become dirty, wash it with mild soap and water, and then rinse it with clean water. Avoid scratching the surfaces of O-rings and the components that contact them. Do not use sharp objects such as a knife or screwdriver to pry apart sealed assemblies or remove O-rings. Serious damage to the O-ring or the seat may result. When components require storage with the sealing surfaces exposed, they should be stored in a clean, dry location for protection.

8.5 SERVICING THE LIGHTS

8.5.1 REPLACING A LIGHT BULB

CAUTION! The Light Bulb may be very hot.

- 1) New bulbs should not be handled with bare fingers. Oils and acids from hands and fingers can affect the bulb and result in shortened operating life. Protect the bulb with paper towel or a clean cloth during handling.
- 2) Open the light housing by carefully unscrewing the light dome. Using a clean rag, grasp the light bulb and pull it from its socket.
- 3) Insert the replacement bulb and reassemble the light housing, making sure all O-rings are properly installed and seated.

8.6 THRUSTER GUARD AND PROPELLER REMOVAL

8.6.1 VERTICAL THRUSTER GUARD

The vertical thruster propeller guard is built into the flotation block. The guard should not be removed from the flotation block. To facilitate cleaning, the flotation block may be removed by completely loosening the retaining screw.

8.6.2 PROPELLER REMOVAL AND REPLACEMENT

- 1) Remove the thruster guard by unscrewing it from the thruster pod.
- 2) Following the removal of the appropriate propeller guard, the propeller can be taken off by first loosening the propeller locking nut (use 7mm wrench), then removing the propeller by unscrewing it from the propeller shaft. Replacement is accomplished by reversing this process. Care must be taken to maintain a .75 mm to 1 mm clearance between the propeller locking nut and the seal spacer to prevent jamming.

8.7 CARTRIDGE SEAL INSPECTION AND REPLACEMENT

Your VideoRay has been equipped with our new, patent-pending cartridge design. This means that the seals that prevent water from entering the submersible through the motor shafts can be replaced rapidly and without tools. It also means that you can check for impending seal failure easily.

There are two “Bal Seals” on the shaft of each of the three thrusters on a VideoRay. Between these two seals is an oil chamber. The cartridge is constructed of machined acrylic and brass, and contains the two seals and the oil. To change the cartridges:

- 1) Remove the nozzle (no tools are needed).
- 2) Use a 7mm wrench to hold the propeller nut and unscrew the propeller.
- 3) Unscrew the nut and remove the single nylon washer.
- 4) Gently pull off the seal cartridge. You may need to twist it a little as you pull.

- 5) Push the new seal cartridge onto the shaft and make sure it is seated in the cartridge cavity.
- 6) Replace the washer on the shaft on top of the seal cartridge.
- 7) Screw on the nut by hand until is tight against the washer, then back it off 2 turns.
- 8) Screw on the propeller and hold the nut with the wrench while tightening the propeller against the nut.
- 9) Replace the nozzle:

We recommend that you check for the presence of water in the oil bath every 10-20 hours of usage. This interval should be on the shorter end if you use your VideoRay in deeper water – in excess of 60 feet or 20 meters – for extended periods. If there is water in the oil, the cartridge should be replaced within the next 10-20 hours.

FIELD SERVICING**9.1 TROUBLE SHOOTING**

The following is a brief diagnostic aid intended to assist the user in determining the nature of problems encountered during the operation of VideoRay.

- 1) Check all the cables for proper connection.
- 2) Check to see that the electrical outlet has power.
- 3) Ensure all power switches are turned on and the power indicator light is on.
- 4) Check if the GFCI (Ground Fault Circuit Interrupter) needs to be reset.
- 5) Check the tether and connectors for damage.

9.1.1 LIGHTS DO NOT WORK

- 1) Check for power to the vehicle.
- 2) Check to see if the bulbs have burned out.

9.1.2 LOSS OF THRUST OR MANEUVERABILITY

- 1) Ensure the propellers and shafts are clear of debris.
- 2) Ensure the propellers are securely installed.
- 3) Check to see if the tether is snagged.
- 4) Check the thrusters to ensure they function properly with VideoRay out of the water.

9.1.3 VIDEO MONITOR DOES NOT SHOW PICTURE

- 1) Check to see that the VideoRay is turned on.
- 2) Ensure the Video Monitor is also powered on (it should come on automatically, but if the monitor power switch is bumped it may need to be powered on manually).
- 3) Check all the video connections.
- 4) Try a different monitor.

9.1.4 POOR PICTURE QUALITY

- 1) Check for proper cable connections and the condition of the connectors. In our experience, poor video cables and video connectors cause many video failures.
- 2) Check that the monitor System button has not been bumped. Press the System button to see if the display improves.
- 3) Ensure that the view port on VideoRay is clean and free of condensation.
- 4) Check for tether damage.
- 5) Try a different monitor.

9.2 ORDERING PARTS

Spare and / or replacement parts are available for your VideoRay Submersible. They can be ordered directly from:

VideoRay LLC
212 East High Street
Pottstown, PA 19464
Telephone (610) 458-3000
Facsimile (610) 458-3010

For Customer Service, E-mail support@videoray.com

When ordering parts, please include the serial number of your VideoRay Submersible, the part description and identification number; and the quantity required.

Some sub-assemblies of the VideoRay Submersible are not field-serviceable and will need to be returned to the factory if they malfunction. All returned items must be sent prepaid to VideoRay at the above address.

9.3 REPAIRS

For repair service, contact VideoRay to receive an RMA (Return Merchandise Authorization) number before sending your equipment to the factory or local Authorized Service Center for repair.